


## VALVE INSTALLATION


All dimensions in mm. Inches in brackets.

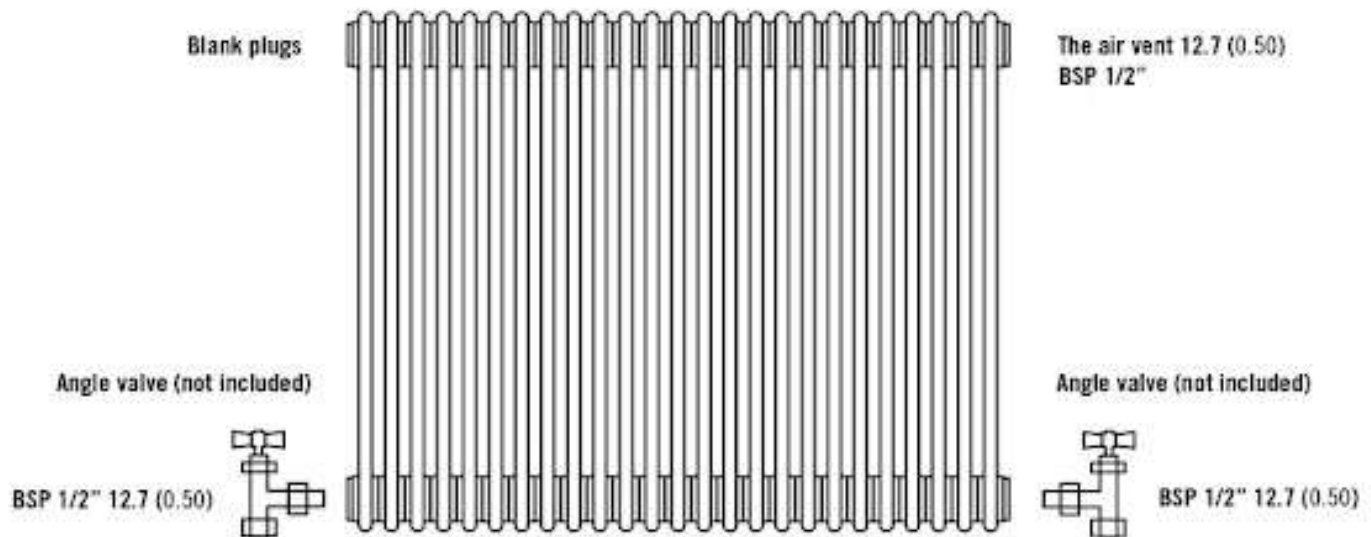

**Note: Factory fitted bushes are welded in place and not removable.**  
**If installing TBOE (Top Bottom Opposite End) please note that the radiator MUST be inverted.**

## BRACKET INSTALLATION

All dimensions in mm. Inches in brackets.

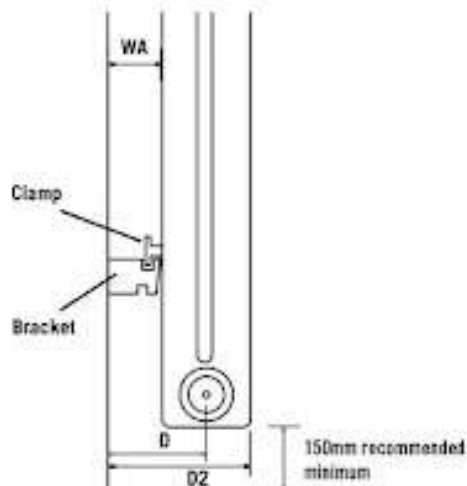

## MEASUREMENTS USING 10mm CVD BRACKETS SLOT

Add 5mm if using 15mm slot

	WA	D	D2
2 Col	23	54	85

Number of columns	Wall to centre of connections		Wall to front face of radiator
	Using 10mm bracket slot	Using 15mm bracket slot	
2	54	59	85 or 90